

## OUTER DIAPHRAGM PLATE



### DESCRIPTION:

Replacement E2 Versamatic outer diaphragm plate. These work in conjunction with the diaphragms to separate the fluid side of the pump from the air side. The plates are threaded to the main shaft/diaphragm rod, compressing the diaphragms and creating an air-tight and fluid-tight seal. The diaphragm plates also support the diaphragms as the shaft is reciprocated, causing them to create a vacuum on the fluid, drawing the liquid into the pump's fluid chambers and then pushing it out.

Size of pump:	2"
Material:	Aluminum